



PROGRAMMING KEY ELEMENTS FOR YOUR WEATHER RADIO

TIME

First, tap the "MENU" button once. The display should read "TIME". Then hit "SELECT". You should now see the time in your display. Use the up/down arrow keys to change the hour. When the hour is set correctly, use the right arrow key to move to the next number. Do this for all numbers. When you're done, hit "SELECT" to save.

CHANNEL

Within the menu, scroll up until you see "CHANNEL". Hit "SELECT". From there, you will have 7 choices of a transmitter frequency. Simply scroll through them until you hear the National Weather Service voice talking to you. Hit "SELECT" again to save. KCRG-TV9 provides a list of frequencies at our programming table, and at our website <http://www.kcrg.com/weather/weatherradios>.

*******SELECT OPTION A, B, or C BELOW*******

A) PROGRAMMING FOR ALL COUNTIES WITHIN CHANNEL RANGE

Once your channel is set correctly, your radio is set to receive all warnings, watches and advisories for **ALL COUNTIES WITHIN THE CHANNEL RANGE**. No further county programming is necessary except for setting your alert tone (see at the bottom).

B) PROGRAMMING FOR A SINGLE COUNTY

Once your channel is set correctly, you can program your radio to alert you about weather in **ONLY** your county. To do this, within the menu, use the up arrow key until you see "SAME SET". Hit "SELECT". You will now have three options: "ANY", "SINGLE", or "MULTIPLE". If you just want a single county, select "SINGLE", and you'll see "SAME 01" on your screen. Hit "SELECT". Now you'll see a bunch of dashes, and there's room for 6 numbers (called SAME Codes). As you set the time earlier, use the up/down arrow keys to scroll through the numbers, and the right/left arrows to go across the screen. When the proper county code is entered, hit "SELECT". You'll then see a "SAME SET" back on the screen, meaning the code has been saved. Hit "MENU" a couple times to back out.

C) PROGRAMMING FOR MULTIPLE COUNTIES

Once your channel is set correctly, you can program your radio to alert you about weather in **MULTIPLE** counties. Within the menu, use the up arrow key until you see "SAME SET". Hit "SELECT". You will now have three options: "ANY", "SINGLE", or "MULTIPLE". For multiple counties, select "MULTIPLE", and you'll see "SAME 01" on your screen. Hit "SELECT". Now you'll see a bunch of dashes, and there's room for 6 numbers (called SAME Codes). As you set the time earlier, use the up/down arrow keys to scroll through the numbers, and the right/left arrows to go across the screen. When the proper county code is entered, hit "SELECT". You'll then see a "SAME 01" back on the screen, meaning the code has been saved. To enter your second county, scroll up until you see "SAME 02" and hit select. Program this the same way as your first county. Your radio can be programmed to hold up to 25 counties if you wish. SAME Codes can be found at our programming table, and at <http://www.kcrg.com/weather/weatherradios>. Hit "MENU" a few times to back out.

SETTING THE ALERT TYPE

When a watch, warning, or advisory is issued, there are a few ways the radio can let you know. To set your alert type, hit "MENU", then scroll up until you see "ALT TYPE". Hit "SELECT". The word "TONE" will appear on your screen, but if you scroll up, you'll also have the option of "DISPLAY" or "VOICE". Select the one you'd like by hitting "SELECT", here are the differences:

TONE = Alert tone will sound for 5 minutes, or until you press any button.

DISPLAY = **NO AUDIBLE ALARM**. Only scrolling text for this option.

VOICE = Alert tone will sound for 8 seconds, then, you'll hear the NWS voice for 5 minutes.

****Your Midland Radio instruction manual has more complete details on other radio features****